


# ALL IN ONE ICE BATH

PRODUCT MANUAL

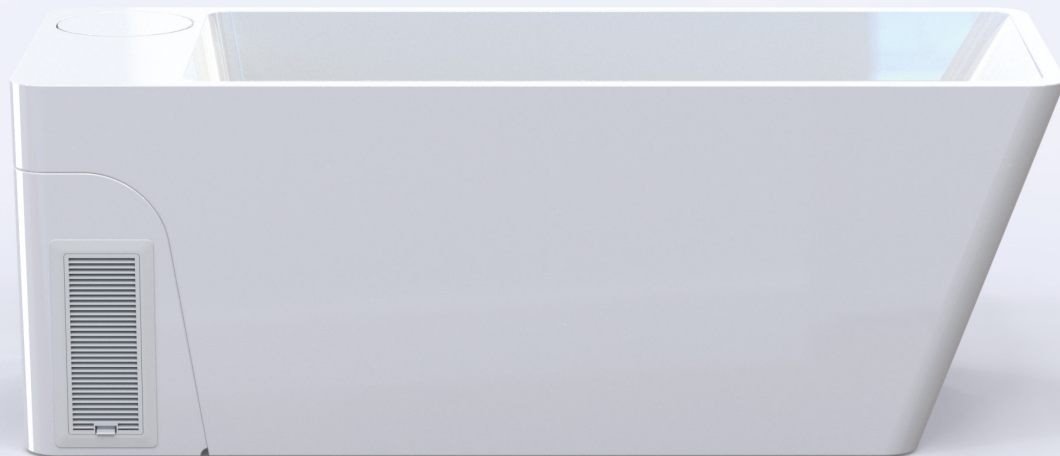

# Contents

|                         |    |
|-------------------------|----|
| Important Safety        | 02 |
| Quick Start Guide       | 06 |
| Control Panel Operation | 15 |
| WIFI Description        | 16 |
| APP Operation           | 18 |
| Warranty                | 19 |



Temperature from  
3-42°C



All-In-One Design



Outdoor / Indoor



No ice needed




Easy to install - no  
tools required



Superior Design



Long lasting  
sturdy material

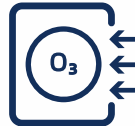

Ozone Purification



20 Micron  
Filtration System



Smartphone  
Remote Control

# Important Safety

Thank you for choosing the allinone series Products. This installation manual provides general information on the installation of our products.

All the information in this guide is based upon the most recent product information available at the time of this publication. Gurgler reserves the right to make changes to product characteristics, packaging, or availability at any time without notice.

***Thank you for your purchase!***



Please unpack and inspect all parts carefully to make sure they are complete and not damaged. If any parts are damaged or missing, please contact the authorized dealer you purchased the product through.

## **BEFORE YOU BEGIN**

- Please read these instructions carefully before beginning your installation.
- Consult your local building codes to ensure that your installation complies with local standards.
- Remove the unit from its packaging. Before disposing, packaging and taking unit from your sales person, inspect the unit to make sure it is in good shape.
- Should inspection reveal any damage or defect in the finish, please contact the authorized dealer you purchased the product through. The warranty does not cover damages or defects in the finish once the unit has been installed. We were responsibility for shipping damages ceases upon delivery of the product in good order to the carrier. All complaints regarding damage due to transport must be made directly to the carrier.
- Please refer to your product's specification sheet and ensure that both your unit and build plan measure match the stated sizes.

# Important Safety

To ensure proper setup and operation, it is crucial to read this manual carefully. Please reach out to us with any questions.



**ELECTRICITY CAN BE EXTREMELY DANGEROUS.  
TO PREVENT ACCIDENTS, IT IS ESSENTIAL TO PRIORITIZE SAFETY.  
PLEASE BE CAUTIOUS WHEN HANDLING ANY ELECTRICAL SYSTEMS.**

## Allinone Plunge Safety Guidelines

### IMPORTANT SAFETY INSTRUCTIONS

Please carefully read and adhere to all warnings and guidelines outlined below to mitigate the risk of serious injury or fatality. Retain these instructions for future reference.

#### USAGE PRECAUTIONS:

**DANGER: Prevent Drowning** - To prevent drowning, individuals under 18 years of age must not utilize the Allinone Plunge unless approved by a medical professional and under constant supervision.

**DANGER: Hypothermia Hazard** - Cold water immersion poses a severe risk of hypothermia, potentially fatal. Cease usage immediately and dial 911 if symptoms such as violent shivering, sluggishness, speech impediments, reduced motor skills, blue skin, or irregular heartbeat occur.

# Important Safety



**DANGER:** Alcohol and Drug Warning - Never consume alcohol or drugs before or during use, as it significantly heightens the risk of fatal hypothermia, unconsciousness, or drowning.

**DANGER:** Entrapment Risk - The suction fittings are designed to match the pump's water flow. Only operate with intact fittings.

**WARNING:** Consultation Advised - Prior to use, consult a physician if pregnant, suffering from obesity, or with medical conditions such as heart disease, high/low blood pressure, circulatory issues, or diabetes.

**WARNING:** Medication Consultation - Seek medical advice before use if taking medication affecting drowsiness, heart rate, blood pressure, or circulation.

**WARNING:** Infectious Disease Alert - Refrain from using if afflicted with an infectious disease.

**WARNING:** Supervised Usage - Individuals with reduced physical, sensory, or mental abilities, or lacking experience, should only use under supervision.

**WARNING:** Temperature Check - Always verify water temperature with an accurate thermometer before entry. Tolerance of regulating devices may vary by  $\pm 2^{\circ}\text{C}$  ( $5^{\circ}\text{F}$ ).

**WARNING:** Entry and Exit Caution - Exercise caution when entering and exiting the Allinone Plunge to minimize injury risk.

**WARNING:** Electrical Safety - Unless proficient, avoid servicing the product yourself. Opening the rear cover may expose you to hazardous voltage. For servicing needs, contact a qualified technician.

# Important Safety



**By adhering to these safety precautions, you can enjoy the benefits of the Allinone Plunge with confidence and security.**

**INSTALLATION AND MAINTENANCE GUIDELINES**  
**FOUNDATION SUPPORT:** Ensure a sturdy foundation regardless of the installation location. If using patio stones, they should be at least two inches thick and twelve inches square. Despite stones, occasional re-leveling may be necessary due to potential settling.

**DECK INSTALLATION:** Verify your deck's load capacity before placing the Allinone Plunge. Consult a qualified contractor or structural engineer to avoid exceeding the rated capacity, preventing structural damage. The ELEMENT+ Plunge, when filled, weighs 1,000 lbs.

**FLOORING PROTECTION:** Prior to placement, confirm waterproof or water-resistant flooring to mitigate damage risk.

**POWER ACTIVATION:** Refrain from powering the Allinone Plunge until it's filled to the required level to prevent immediate damage and voiding of warranty.

## **CRUCIAL HYPOTHERMIA INSIGHTS**

Extended exposure to cold water may induce hypothermia, necessitating a balance between warmth and cooling. Hypothermia occurs when our body's heat loss exceeds heat production, affecting internal temperatures. Four primary heat exchange mechanisms - conduction, convection, radiation, and evaporation - regulate body temperature.

When warming mechanisms like shivering fail to counteract cooling, hypothermia manifests.

Symptoms progress through stages:


**MILD HYPOTHERMIA:** Shivering, goosebumps, impaired motor skills.

**MODERATE HYPOTHERMIA:** Intense shivering, sluggishness, speech difficulties, impaired fine motor skills.

**SEVERE HYPOTHERMIA:** Muscle rigidity, confusion, cessation of shivering, cyanosis, erratic heartbeat, unconsciousness. Recognizing these signs is crucial for prompt intervention and prevention of severe consequences.


# Quick Start Guide

## ALL IN ONE ICE BATH

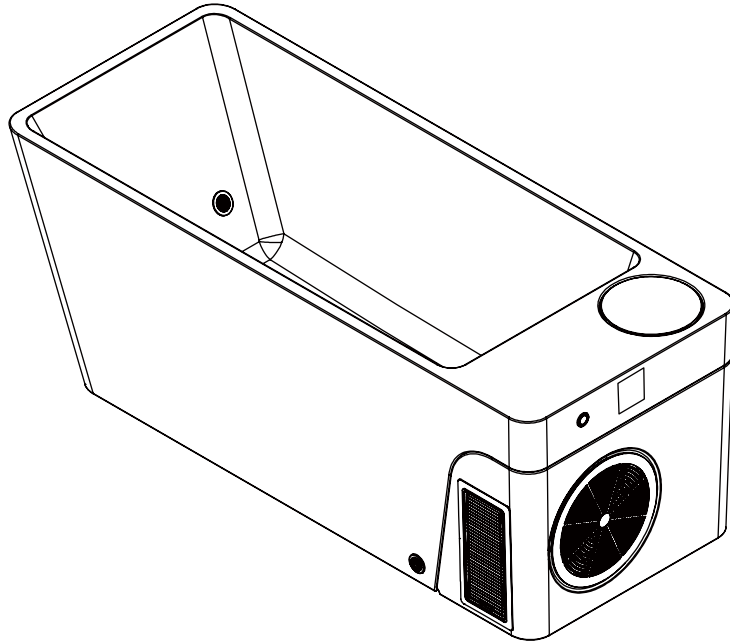


### COMPLIMENTARY ITEM


Freebies and accessories that come with the bath-tub.

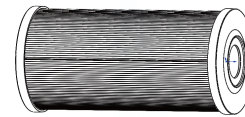


Filter\*1



Filter\*1





Thermal cover\*1

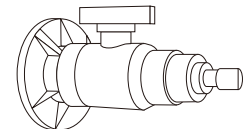

Drain connector\*1



# Quick -Product Size

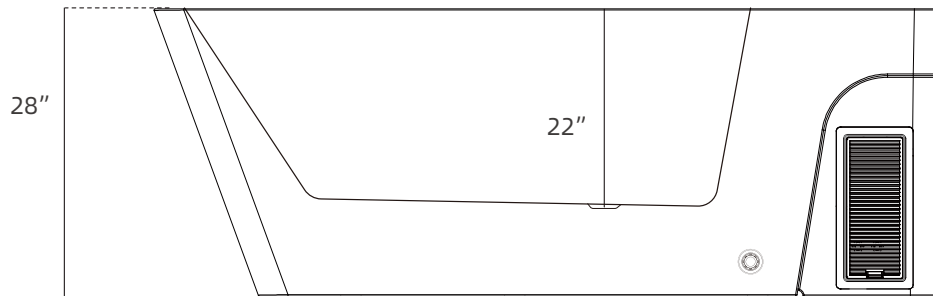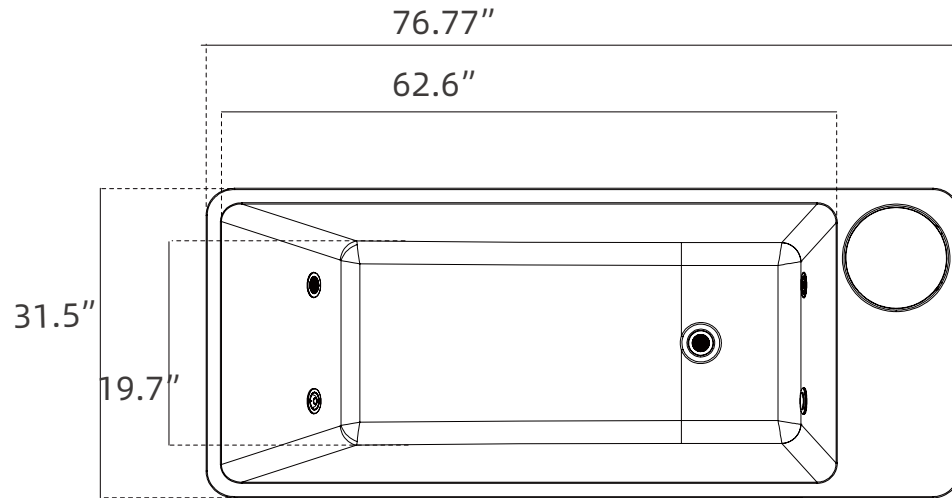

Voltage / Hz


220~240v 50Hz/  
100~120v 60Hz

Power


1HP

Current


15A

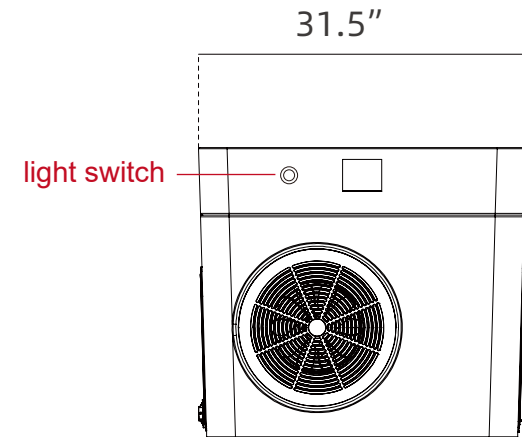

# Quick-unpack

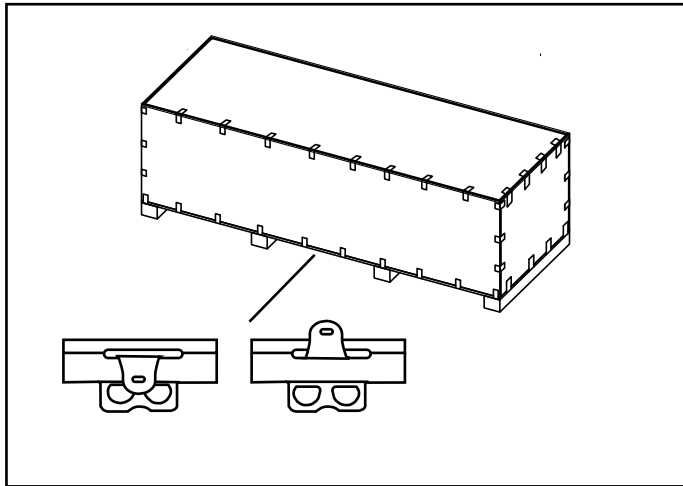


- Lift up the steel tongue on the edge of the board.

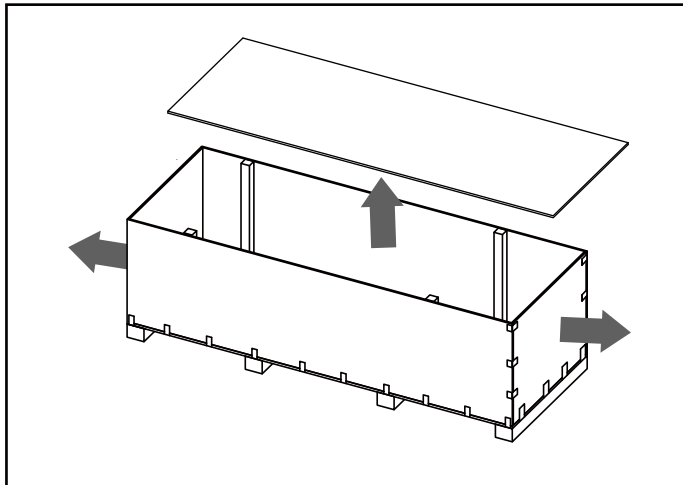


- Then remove the top panel and then the surrounding area, being careful when unpacking to avoid scratching the body.

# Quick -how to place

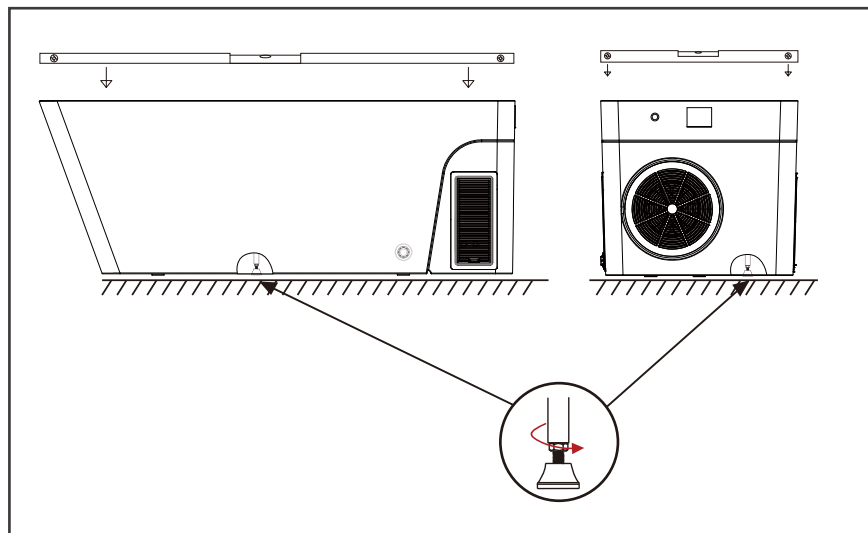


- When positioning the Plunge, ensure there's a minimum clearance of 16" inches on the end housing the component parts.
- Ensure the Plunge is situated on a level surface capable of bearing 544kg / 1,200 lbs.

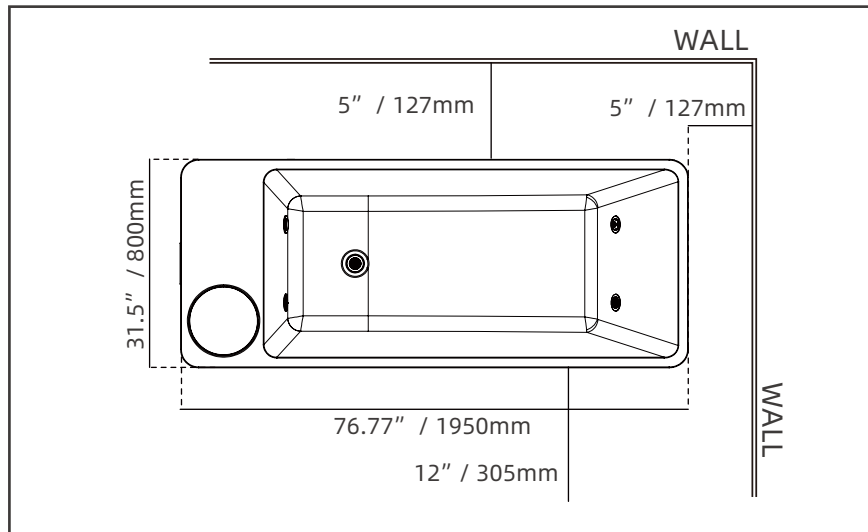

- Provide at least 12" inches of space on the front side for drain access, while 5" inches are sufficient at the back.
- Maintain approximately 5" inches of clearance from the wall on the opposite end of the tub for comfortable head leaning.


# Quick -Installation of drain valve

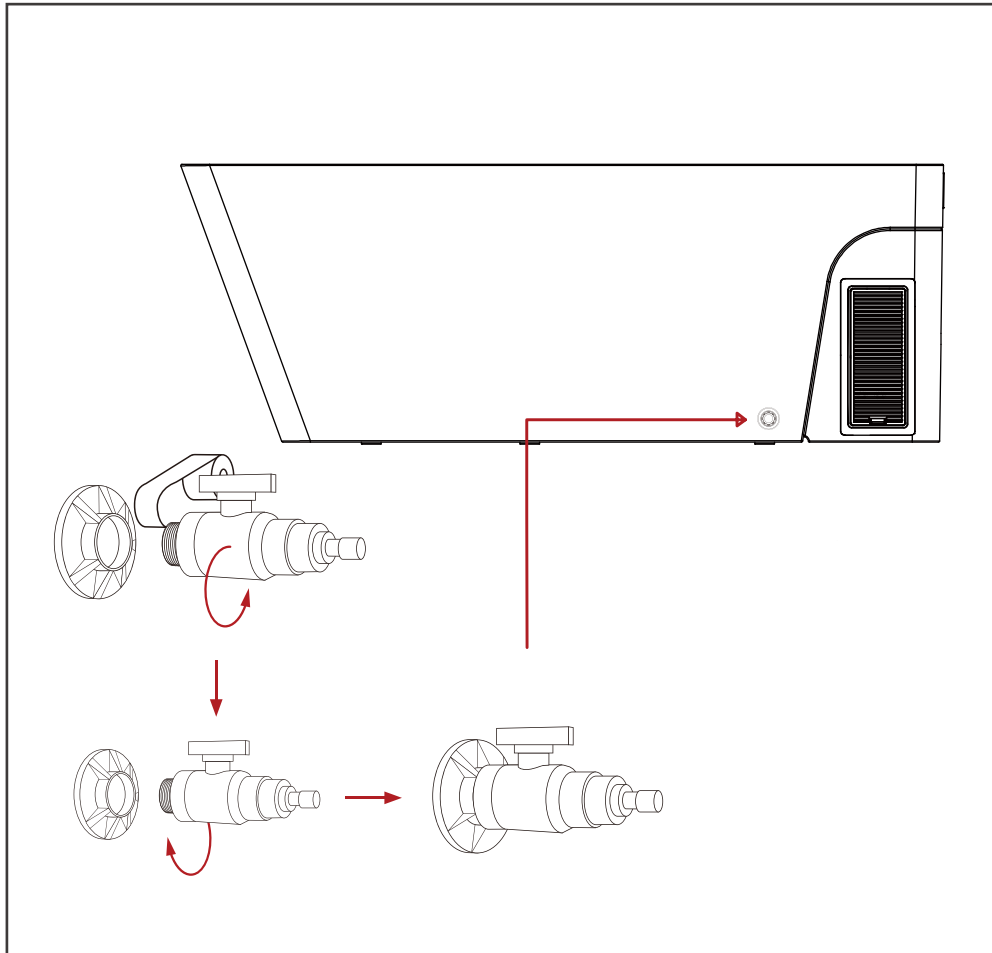

- Connect the "Drain connector"  
Securely screw the "Drain connector" onto  
the "Drain" connector on the Plunge,  
Wrap the drain connector with  
the white Teflon tape.

※This must be done before the first water  
release is performed


# Quick -drainage precautions

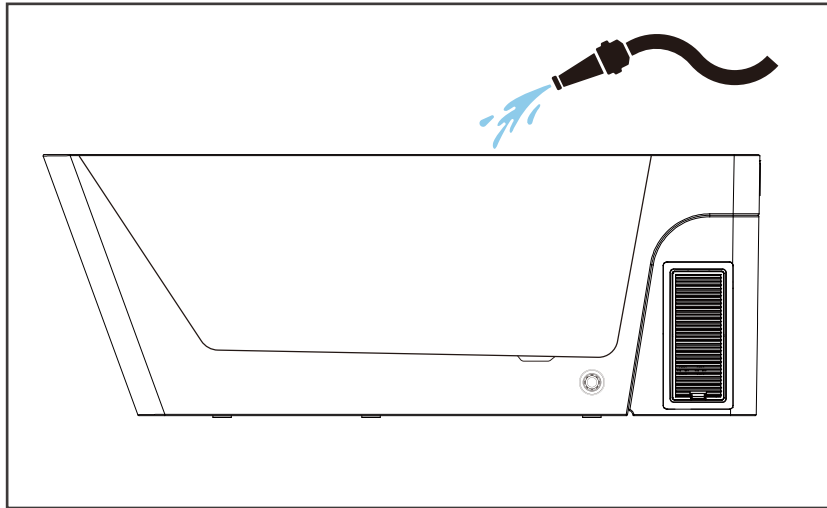

- Proceed to fill the Plunge with water.

Recommended water levels:

- Indoor: Maintain water level at 4.5" from the top.
- Outdoor: Keep water level at 3" from the top.

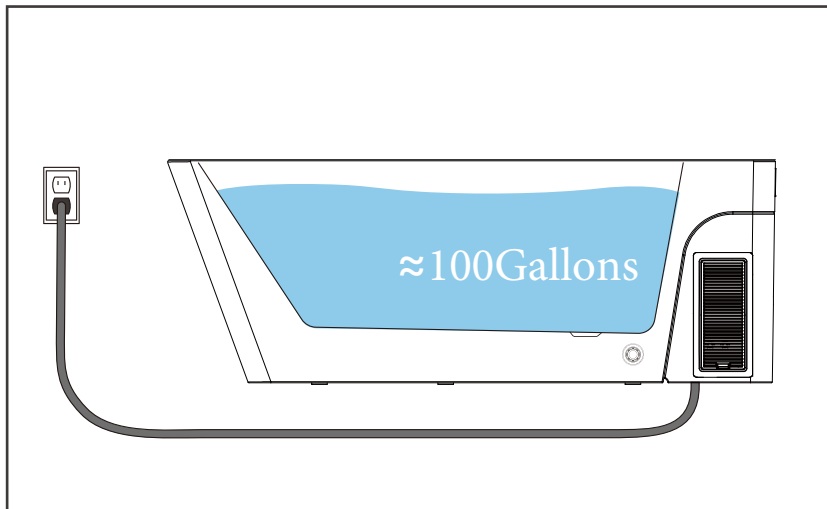


- Once the tub is filled, you can connect your Plunge to a dedicated 120V 15A circuit outlet.


Note: Allow the Plunge to rest for a minimum of 20 minutes to ensure proper settling of the coolant before plugging it in.

Note: If you intend to use an extension cord, ensure it's a 12-gauge cord to provide ample power for distances up to 25 feet.

# Quick -how to drain

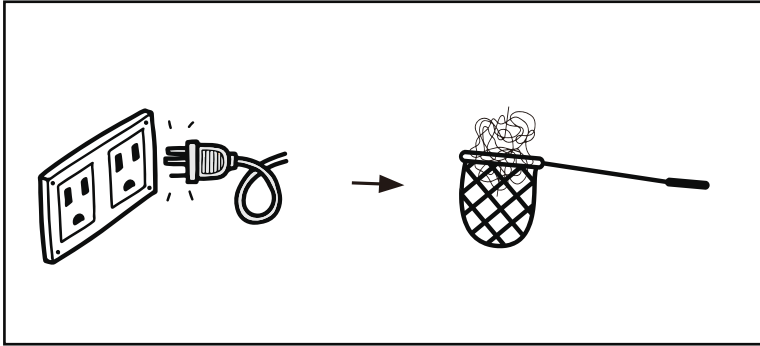


- After turning off the power, use a strainer to salvage clean debris and keep the water body free of other substances.

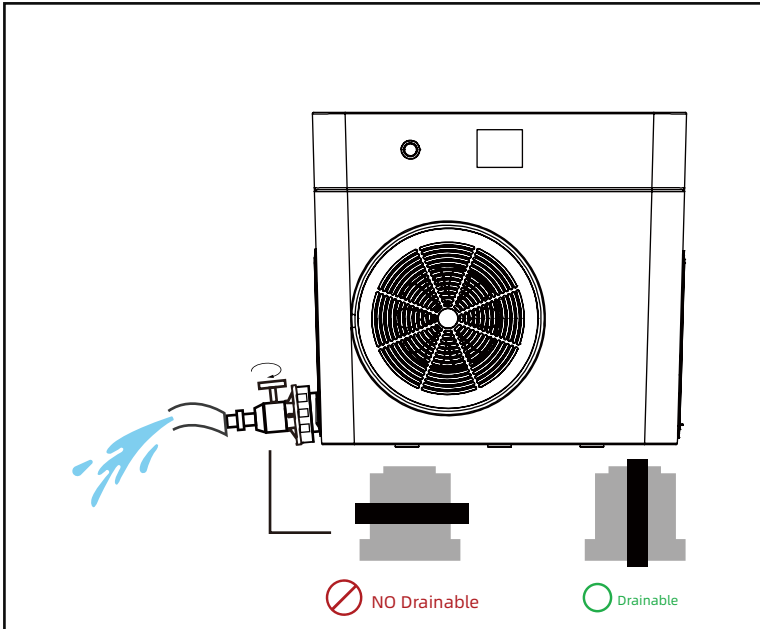


- When it is time to drain the water, turn the pre-assembled drain valve 90° and start draining as shown in the illustration. When it is necessary to drain the water, turn the pre-assembled drain valve by 90° and start draining the water as shown in the illustration.

## Quick -rear cover removal

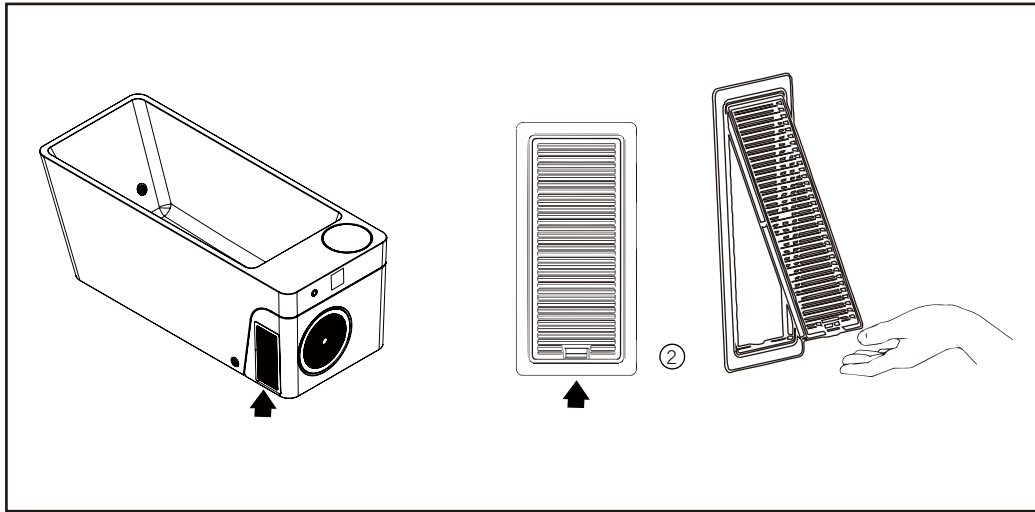


- Side air inlet removal buckle the lower handle and pull outward to open the air inlet cover.

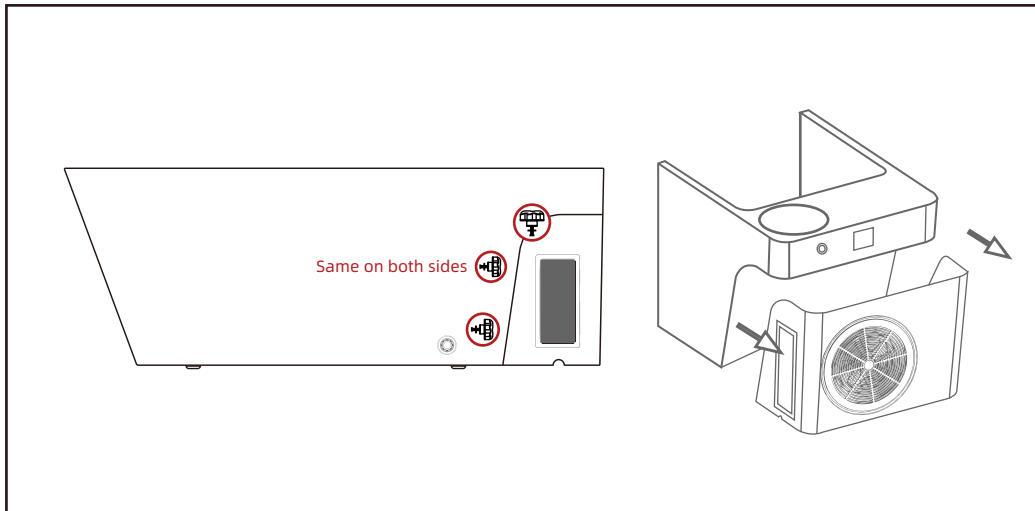


- Hand access to the inside of the air inlet, turn the 6 fixing screws until completely removed, then remove and the back casing, taking care to avoid the machine and the foam.

# Quick -replacement of filter cartridge

## Main filter

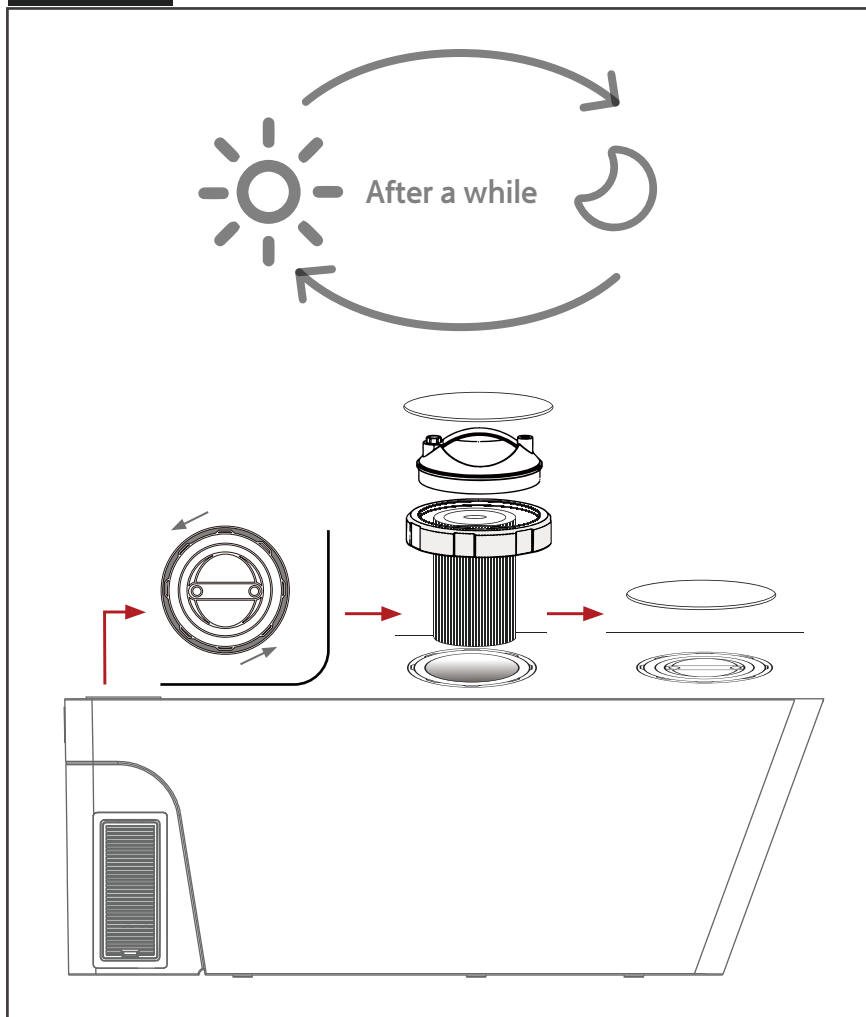

## Outlet

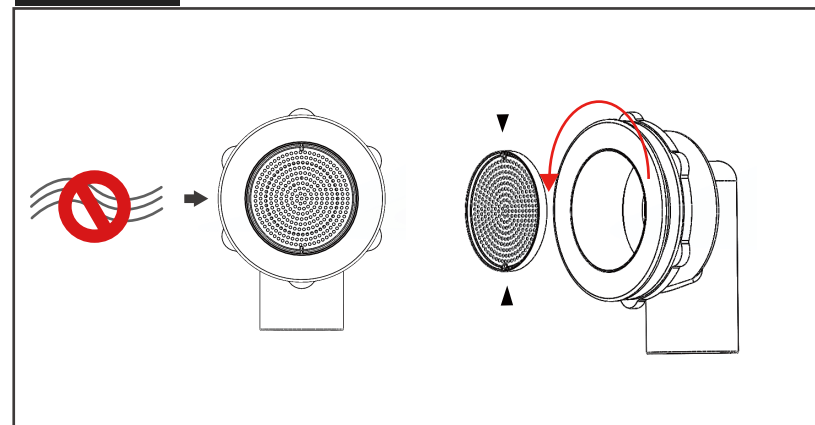

The return spout acts as a pre-filter. Each small hole is only 1 mm and effectively filters out hair and some large particles. We recommend that you also dismantle and clean it regularly to ensure the proper functioning of your bathtub.

- We recommend that you replace the filter cartridge after using it for a period of time by opening the round acrylic cover when the machine stops working, rotating the filter housing counterclockwise, then removing the paper cotton cartridge, replacing it and reassembling it, and that's it.




# Control Panel Operation

## Operation way

- ① **【ON/OFF】** Under the main interface, press  1S to turn on/off.
- ② **【Lock/Unlock】** In the state of locking machine, after press  the buzzer start "beep", remove the lock button and the  icon turns off.
- ③ **【Mode Switching Function】** Press  to switch modes between heating, cooling and automatic.
- ④ **【Disinfection Function】**
  - When the value of parameter 9 is 0, press  for 3 seconds to start disinfection function,  icon will occur. Press  for 3 seconds again to stop disinfection function,  icon will disappear.
  - When the value of parameter 9 is 1, if the unit is on, the disinfection function will be started 20 minutes for every 20 minutes.
- ⑤ **【Temp Setting Function】** Under the main interface, Press  or , the set temperature can be adjusted.
- ⑥ **【Return to the Main interface】** Press  to return to the main interface.
- ⑦ **【Celsius and fahrenheit switch】** Under the main interface, press  and  return to the main interface.
- ⑧ **【Manual defrost】** When the unit is under heating mode or automode, press  and  key for 3 seconds, the defrost mode will be started

## screen functionality

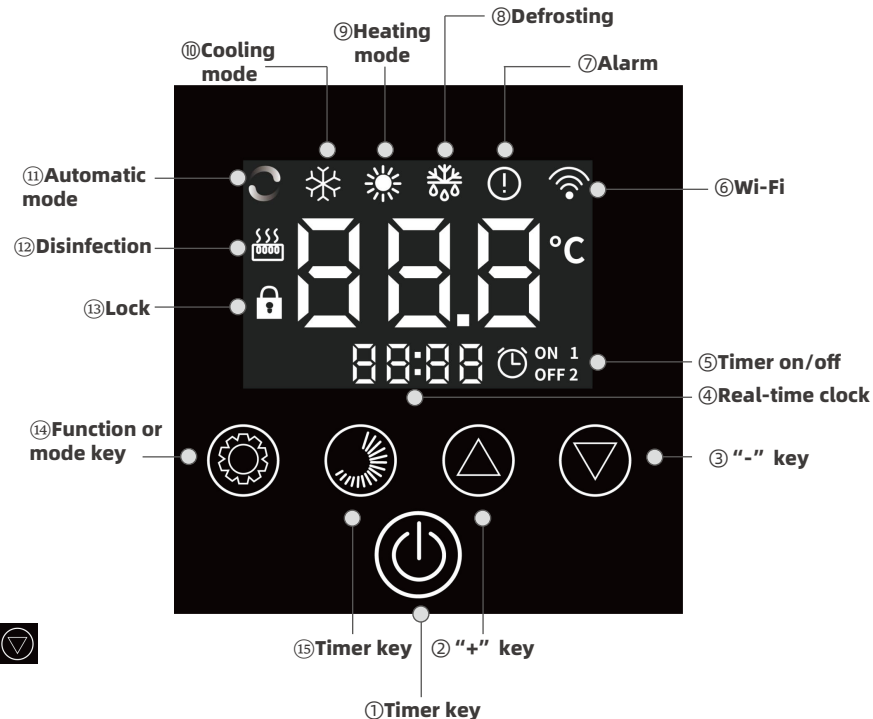

# WIFI Description

① When power is on, press and hold the "⚙️" and "⬆️" keys at the same time for 3 seconds to enter the distribution network. The "📶" icon will flash rapidly;.

② Turn on the phone's Wi-Fi function and connect to the Wi-Fi hot-spot. The Wi-Fi hot-spot must be able to connect to the Internet normally;


③ Open the "smart life" APP, log in into the main interface, click on the top right corner "+" or "add equipment" of the interface, enter the equipment type selection, the "Large Home Appliances", select "Smart Heat Pump" equipment and add equipment into the interface.

④ After selecting "Smart Heat Pump", enter the interface of "Add Equipment", after the indicator light under " " flashes rapidly , click" Confirm indicator rapidly blink ". Enter the Wi-Fi connection interface, enter the Wi-Fi password of the mobile phone (it must be the same as the Wi-Fi of the mobile phone), click "Next", and then directly enter the connected status of the device.

⑤ When "Scan devices" , "Register on Cloud" , "Initialize the device" are all completed, connect succeeds.




①

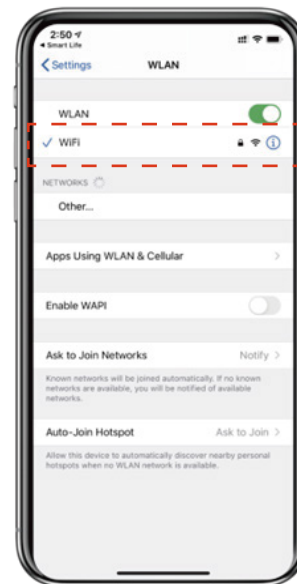


②



③

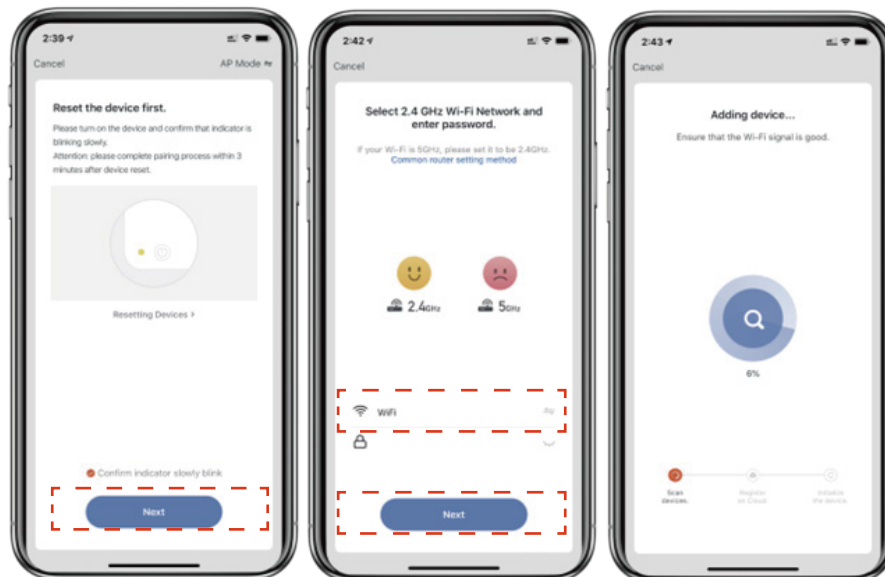

④

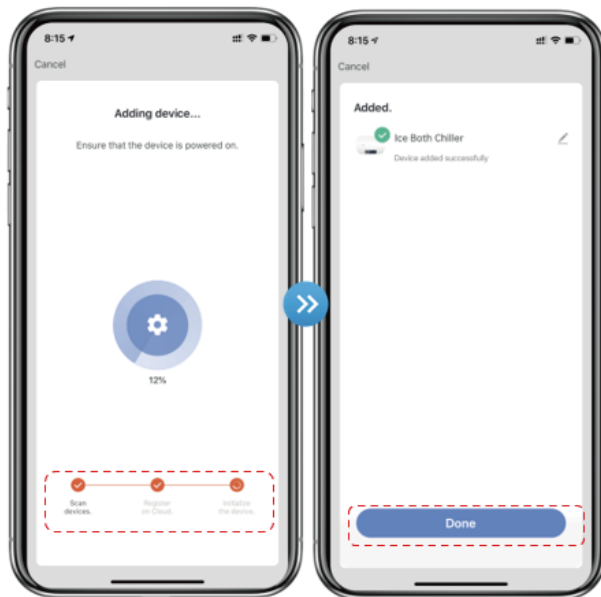

⑤




Smart Life QR code

NOTE: Click the device to check the status, and you can set the operating mode, ON/OFF, timer. Click "+" to add devices.

# APP OPERATION

- ① Return to previous menu.
- ② You can change device name, select device installation location, check networking status, add Shared users, create device cluster, view device information.
- ③ The circle slides counterclockwise to reduce the temp, but clockwise to increase the temp.
- ④ After setting the temperature, it will reach.
- ⑤ Current water temperature in the cylinder.
- ⑥ Whether the machine is running (ON/OFF).
- ⑦ Click to select the mode to be switched.
- ⑧ Click to add timing off/on time.

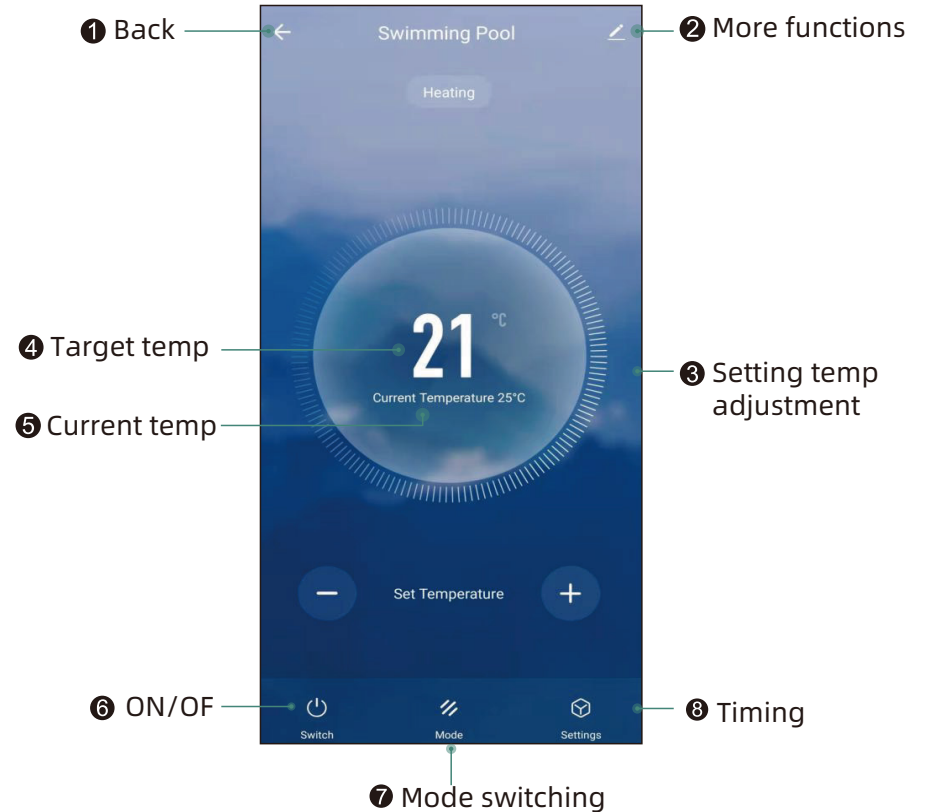

# WARRANTY

**Please be aware that damages resulting from freezing conditions or improper water chemistry are not covered under our warranty.**

Continuous water flow is crucial for three main reasons:

1. Sanitary Conditions: Stagnant water poses sanitation risks for the system. Accumulated bio-matter can solidify inside the pipes, necessitating thorough cleaning with hot water. Adherence to the maintenance protocol outlined in the manual is imperative to prevent such issues.
2. Preventing Damage: In regions where temperatures drop below freezing, stagnant water can lead to plumbing system damage, including cracks and breaks.
3. Maintenance in Cold Weather: During freezing temperatures, it's essential to monitor your Plunge daily to ensure uninterrupted water flow. If your Plunge lacks a heater and the temperature remains below 32°F for 12 hours, it's necessary to drain the Plunge, filter, and chiller to prevent damage.

**It's vital to maintain continuous water flow to safeguard the integrity and functionality of your system.**





**ALL IN ONE ICE BATH**